



TR Series

Installation and application

1. How to mount workpiece:

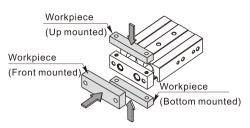


How to mount the workpiece

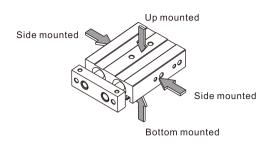


How to mount the cylinder


2、Max. weight of allowable side-load

 Mounting type



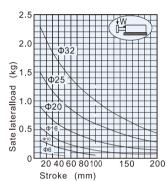

3、Safe deflection

 



The average value of deflection of rod end of the whole series basically stays in the line showed in the chart on the right.